



JPI settings	
Jumper	command from U1 & U2 type
1+2	LocoNet / CBUS / RocNet / WIO_D1 LTV847 or LTV844
2+3	other systems LTV844 only